

Instructions to Assemble the Projector for Movie Nights and Couple it to the Sounds System



Rev 0.2
Albert Pucio
Joan Johnson

1. Pull card table from under the stair case
2. Open the sound closet and take out
 - a. Projector
 - b. Cables
 - c. Cable adapters
 - d. Adapter box
3. Get equipment from from youth group room
 - a. DVD Player
 - b. A/V Cable (Red/Yellow/White RCA cable)
 - c. extension cord
4. Set Projector and DVD Player on card table



*fig 1: video and sound from
DVD player*

5. Take cables from DVD and plug the yellow end to the yellow connector on projector
6. Put the red and white plugs into the adapters connected to the passive direct box adapters
7. Plug cable adapters into the passive direct box

*fig 2: RCA to
big plug
adapters*



fig 3: passive box assembled with adapters

8. Plug DVD Player into extension cord
9. Plug Projector into extension cord
10. Plug other end of extension cord to power source (outlet)
11. Plug ends of cables to snake use ports 5 & 6



ig 4: sound system cabling to "snake" from adapter box

12. Turn on the amplifier switch on front of Peavy Box



fig 5: amplifier - look for large switch on front panel

13. Turn on sound board in sound alcove (power switch in back)



fig 6: sound board in sound alcove

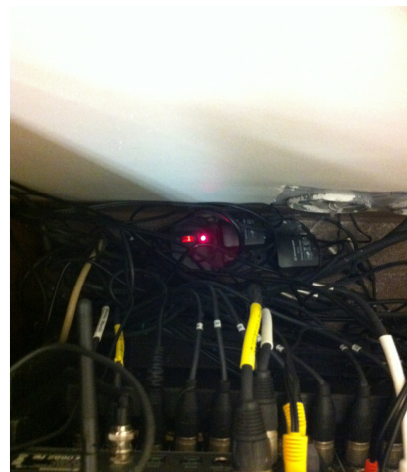 


fig 7: power switch for sound board is behind it - it's the big red switch on the power strip

14. At the sound board Check that 5 & 6 are not muted, but turn down volume

15. Power up the DVD and Projector
16. Test system by putting movie in DVD player
 - a. Change source on projector if necessary
 - b. adjust display for
 - i. size
 - ii. keystone effect
 - iii. adjust project height with kickstand
 - c. adjust volume as necessary from sound board



fig 8: sound board: please lower volume 5 & 6 before testing